


Sample Water Hook-up Plumbing

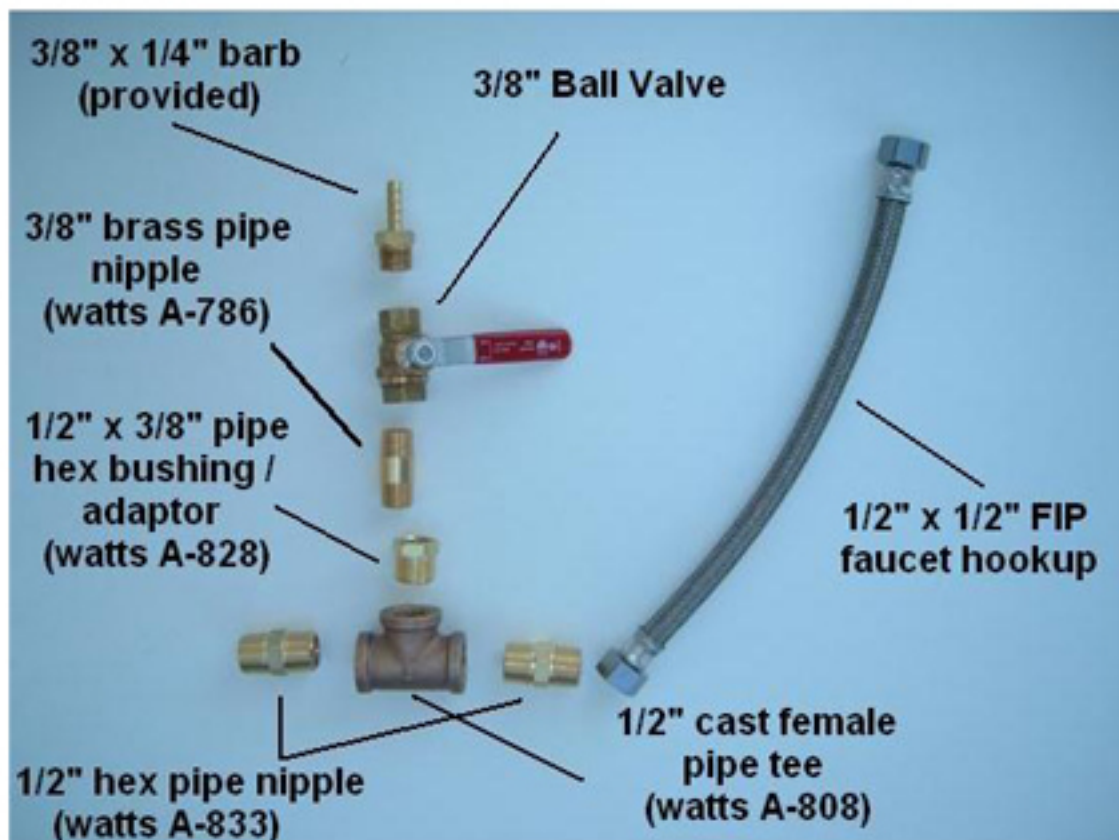

Remember: Wrap all brass to brass threads with Teflon tape, and tighten all fittings with a wrench, pipe wrench or pliers to avoid any leaks.



Remove the cold water flexline from the sink. Reconnect it to the tap assembly, and connect the new flexline to the sink.